

Creaty's Unique Features

What is Twin?

A compact head rail with two shades fits neatly on the window frame and yet offers an easy operation.



Drum Type Twin One Chain





Drum Type Twin



Cord Type Twin

Two-story Structure

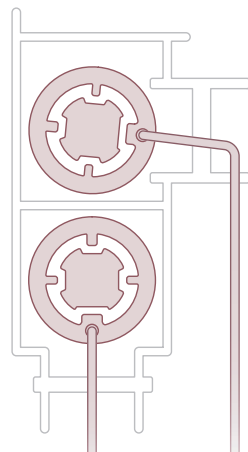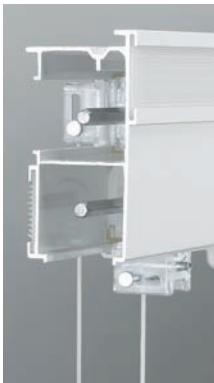

One- or Two-way Operation Available



Drum Type Twin One Chain

Both the front shade and back shade can be raised and lowered by a single chain.



●How to pull up the front shade
Pull down the front side of Ball Chain.



●How to pull up the back shade
Pull down the back side of Ball Chain.



●How to pull down the front shade
Pull down the front side of Ball Chain and release it.

●How to pull down the back shade
Pull down the back side of Ball Chain and release it.

Creaty Drum

TOSO's Unique Single-Point Recoiling Drum
Enables a stable lift-cord reeling: taking up the lift cord at a single point without lateral swaying when lifting the screen.
Allows the screen to be neatly folded.



Drum Type Single

Simple Continuous Operation

With a continuous clutch, Creaty Drum offers a one-handed operation.



Stylish

Transparent ball chains match most fabrics and don't stand out.



"Speed Controller" for Safety

The Speed Controller prevents a rapid fall of the shade and maintains a steady speed regardless of load.



Easy Maintenance

The RS Tape Ring N realizes easy maintenance. No need to put the cord through each ring one by one. Just slide the cord into this S-shaped ring from the side.



Quiet Operation

Pulley improvements greatly reduce noise when raising or lowering shades.

Creaty Cord


Quite operation with small power.
The screen stops at anywhere you want.




Cord Type Single

Drum Type Single

Product View and Parts Name

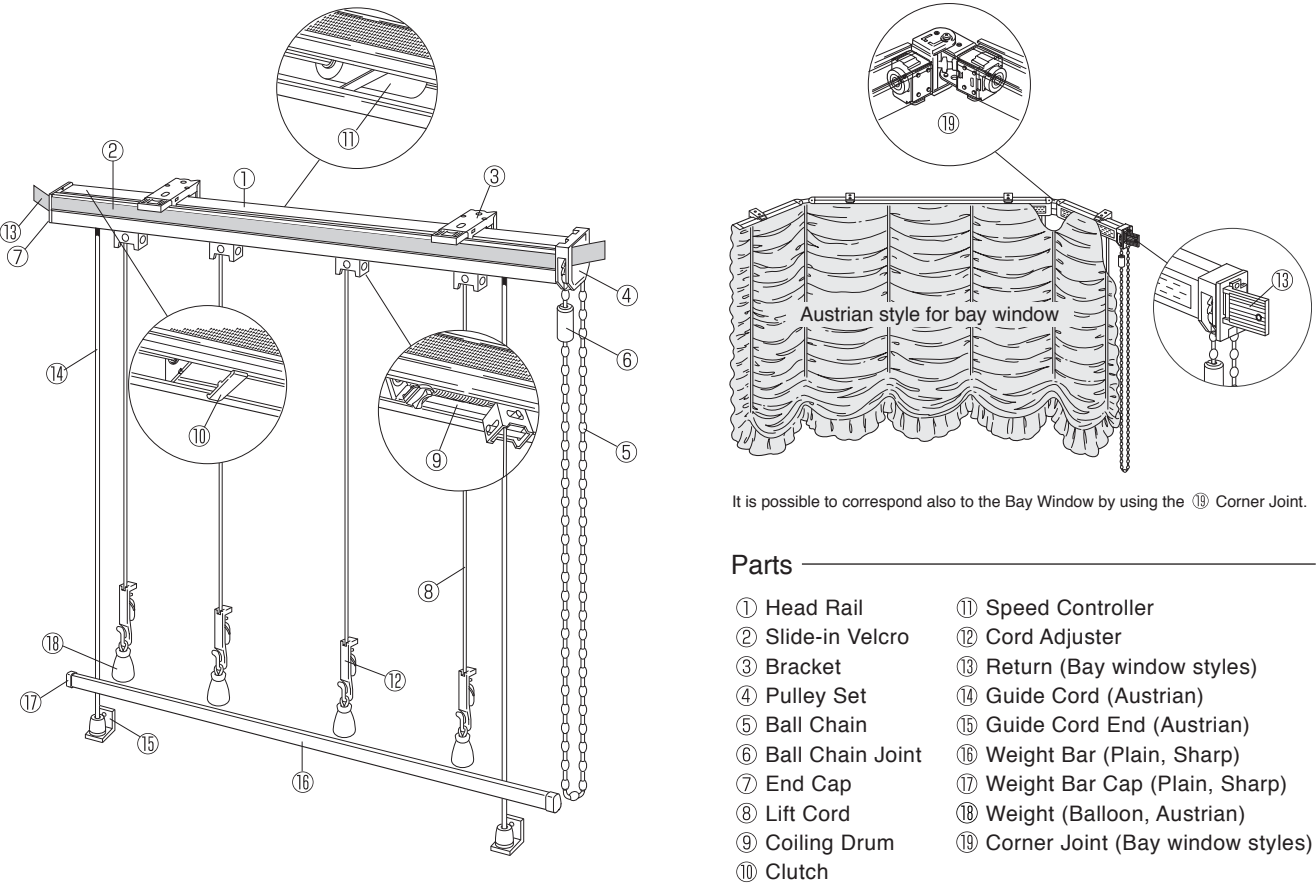

Brackets

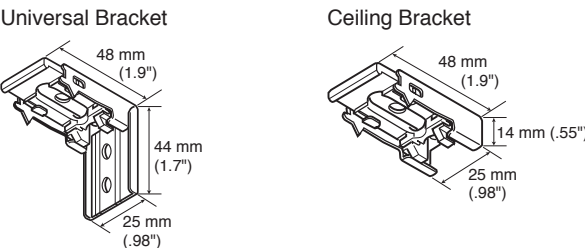


Maximum Shade Weight

5 kg (11 lb)
Including sewing materials.

Allowable Size


Product width (W)	400 mm (16") to 4,000 mm (157")
Product height (H)	480 mm (19") to 3,000 mm (118")

Installation Dimensions

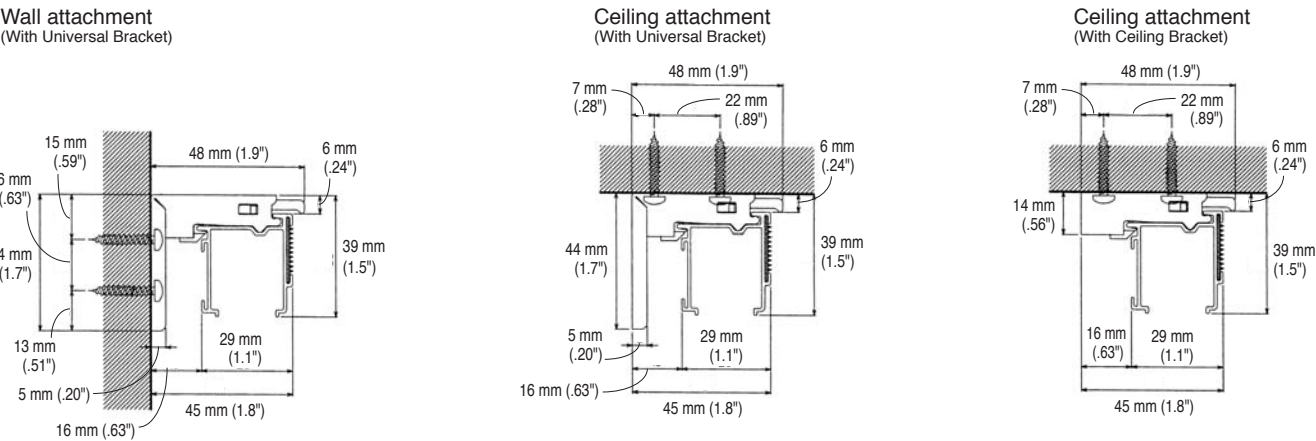

Drum Type Twin


Product View and Parts Name

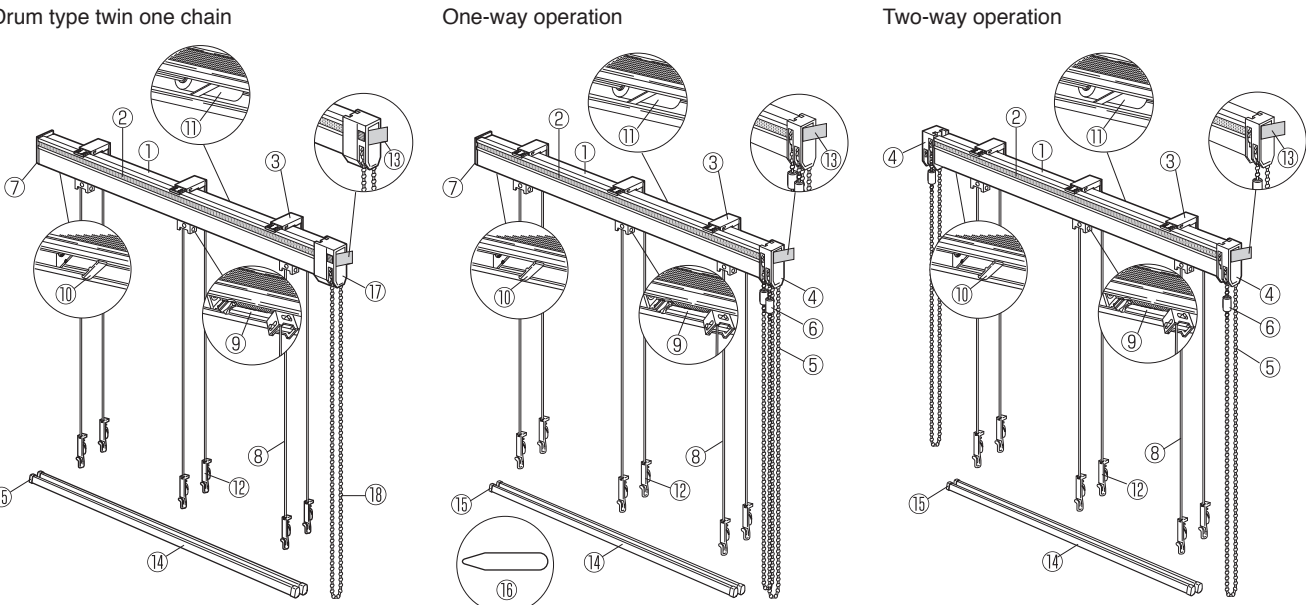

Parts

- 1 Head Rail
- 2 Slide-in Velcro
- 3 Bracket
- 4 Pulley Set
- 5 Ball Chain
- 6 Ball Chain Joint
- 7 End Cap
- 8 Lift Cord
- 9 Coiling Drum
- 10 Clutch
- 11 Speed Controller
- 12 Cord Adjuster
- 13 Return (Only when specified)
- 14 Weight Bar
- 15 Weight Bar Cap
- 16 Keeper Plate
- 17 One Chain Pulley Set
- 18 Loop Ball Chain

Brackets

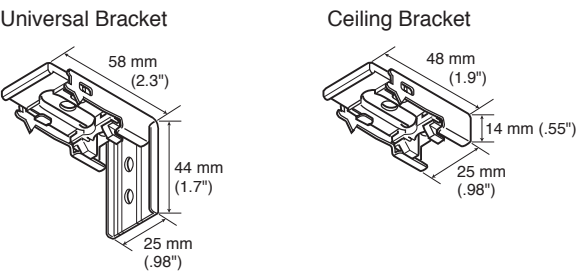


Maximum Shade Weight

Total 8 kg (17.6 lb)
One-way operation, Two-way operation:
Front shade or back shade is 5 kg (11 lb) or less, and total weight is 8 kg (17.6 lb) or less. Including sewing materials.
One chain:
Front shade or back shade is 4 kg (9 lb) or less, and total weight is 8 kg (17.6 lb) or less. Including sewing materials.

Allowable Size


Product width (W)	One-way operation, Two-way operation: 400 mm (16") to 4,000 mm (157") One chain: 300 mm (12") to 4,000 mm (157")
Product height (H)	480 mm (19") to 3,000 mm (118")

Installation Dimensions

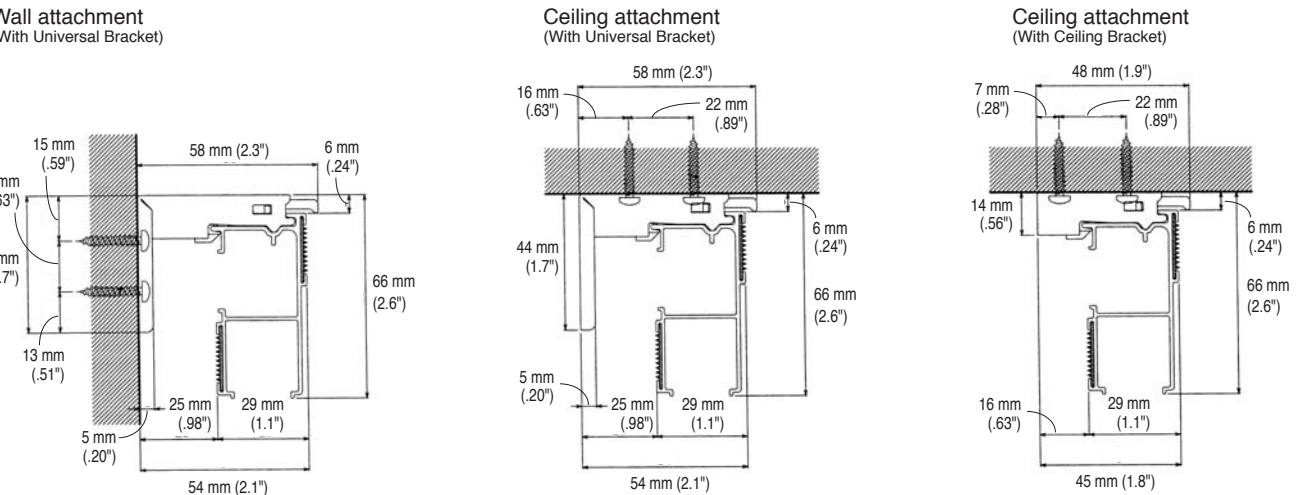


Cord Type Single

Product View and Parts Name

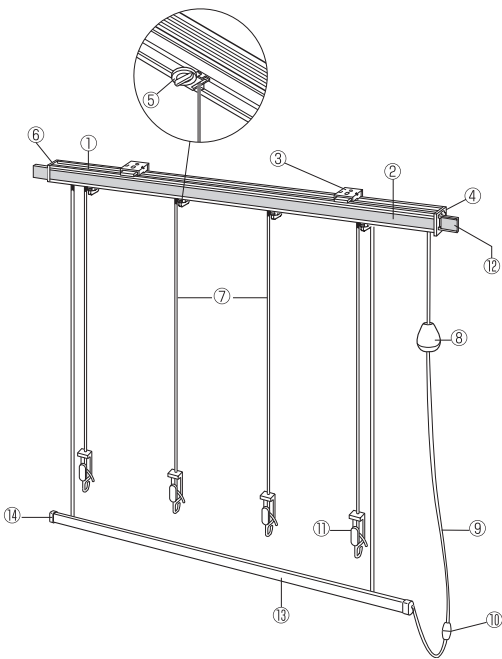

- Parts
- ① Head Rail
 - ② Slide-in Velcro
 - ③ Bracket
 - ④ Stopper Case (Main unit)
 - ⑤ Cord Guide (Cord Guide A/B)
 - ⑥ End Cap
 - ⑦ Lift Cord
 - ⑧ Cord Stop
 - ⑨ Cord
 - ⑩ Safety Joint
 - ⑪ Cord Adjuster
 - ⑫ Return (Only when specified)
 - ⑬ Weight Bar
 - ⑭ Weight Bar Cap

Brackets

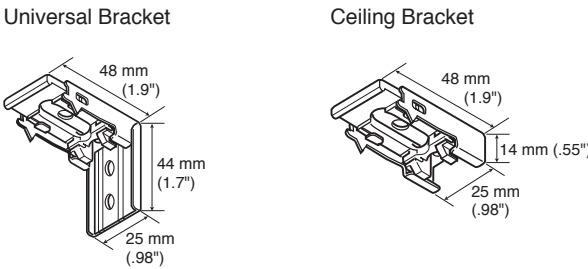


Maximum Shade Weight

5 kg (11 lb)
Including sewing materials.

Allowable Size


Product width (W)	180 mm (7.1") to 2,400 mm (94")
Product height (H)	480 mm (19") to 3,000 mm (118")

Installation Dimensions

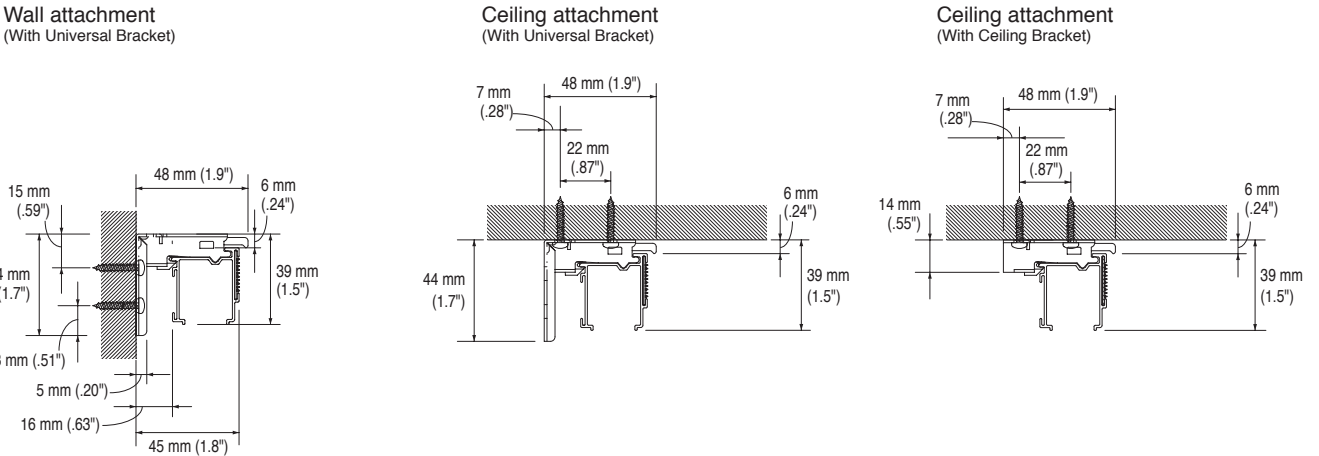


Cord Type Twin

Product View and Parts Name

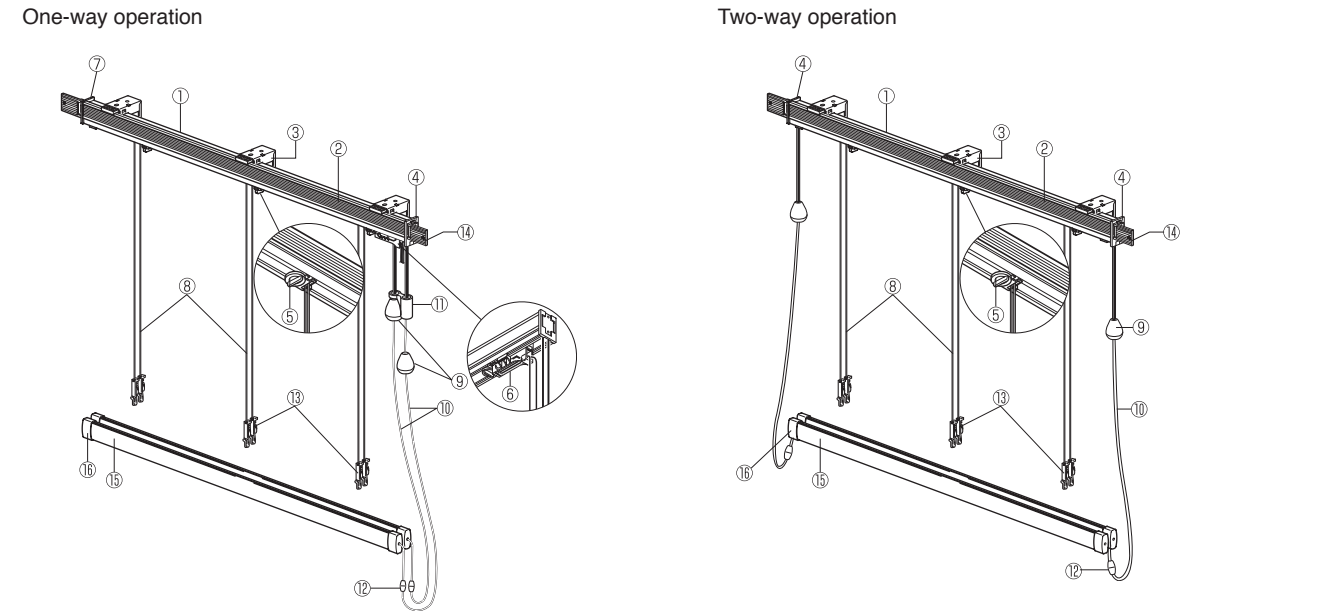

- Parts
- ① Head Rail
 - ② Slide-in Velcro
 - ③ Bracket
 - ④ Stopper Case (Main unit)
 - ⑤ Cord Guide (Cord Guide A/B)
 - ⑥ Stopper Guide (Width up to 290 mm)
 - ⑦ End Cap (One-way operation only)
 - ⑧ Lift Cord
 - ⑨ Cord Stop
 - ⑩ Cord
 - ⑪ Cord Separator (One-way operation only)
 - ⑫ Safety Joint
 - ⑬ Cord Adjuster
 - ⑭ Return (Only when specified)
 - ⑮ Weight Bar
 - ⑯ Weight Bar Cap

Brackets

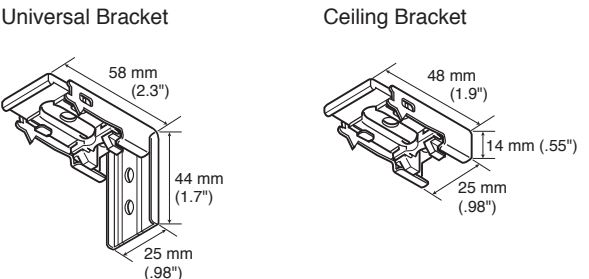


Maximum Shade Weight

Total 8 kg (17.6 lb)
Front shade or back shade is 5 kg (11 lb) or less, and total weight is 8 kg (17.6 lb) or less. Including sewing materials.

Allowable Size


Product width (W)	180 mm (7.1") to 2,400 mm (94")
Product height (H)	480 mm (19") to 3,000 mm (118")

Installation Dimensions

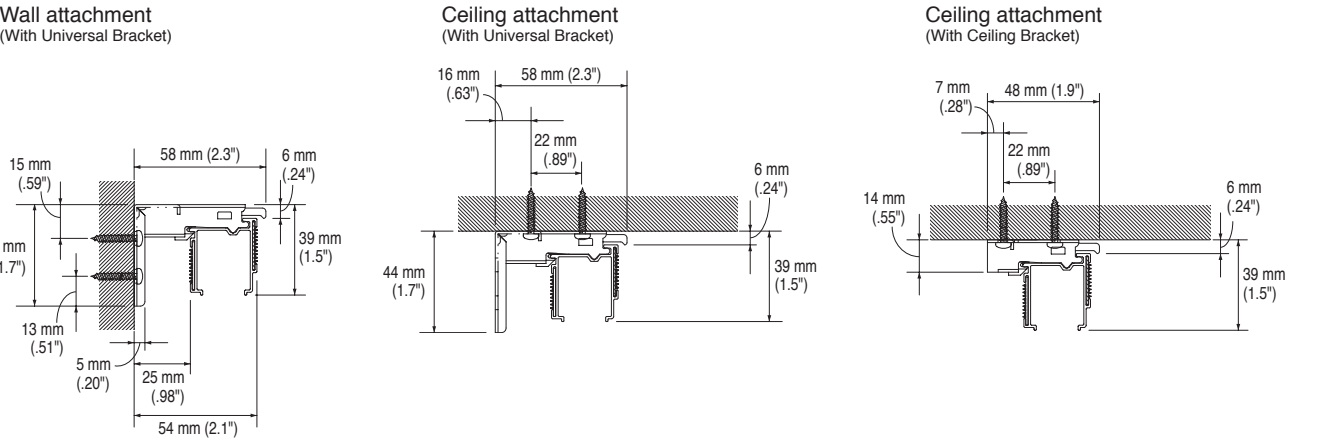


Bracket Installation

Two ways of installation are possible:
wall attachment and ceiling attachment.

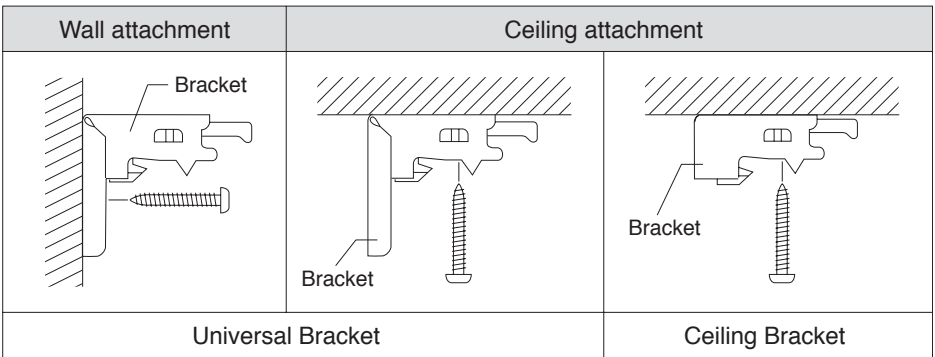


It is advisable to fit the brackets 10 cm (4.0") from both ends. When installing three or more Brackets, space them evenly.

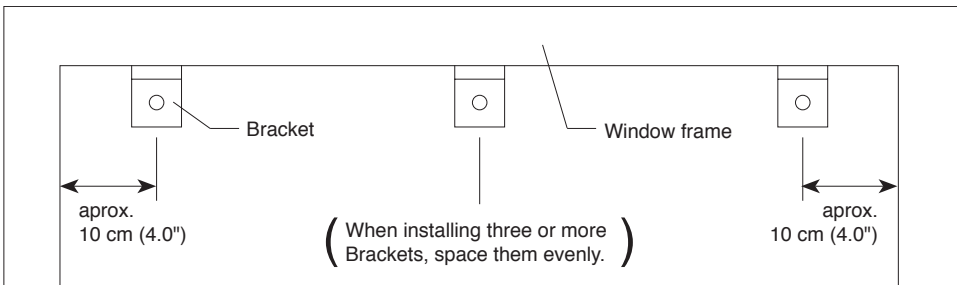

Installation and Removal of the Head Rail


Installation

1. Hook the Head Rail onto the Bracket.
2. Push the Head Rail in until it clicks.

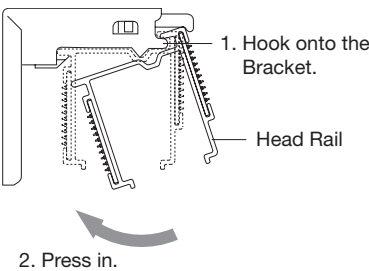

Removal

1. Press the Release Button and pull the Head Rail toward you.
2. Remove the Head Rail from the Bracket.

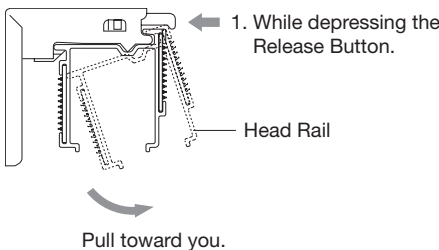


Operation Method

Creaty Drum


How to pull up the shade

1. Pull down the Ball Chain nearest you.
2. Loosen the tension on the Ball Chain when you want to stop at a certain point.
If the shade does not stop, pull down the Ball Chain again about 2 cm (.80") and do it again.

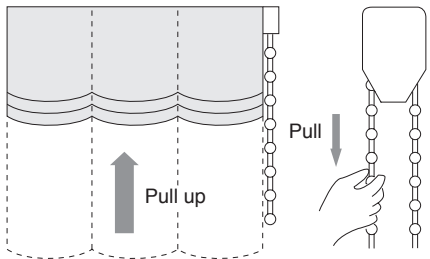

How to pull down the shade


1. Pull down the Ball Chain nearest you about 2 cm (.80") ①, and then loosen the tension on the Ball Chain ②. (When doing this, keep your hand on the Ball Chain.)
2. Grip the Ball Chain again when you want to stop at a certain point and pull down the Ball Chain about 2 cm (.80").

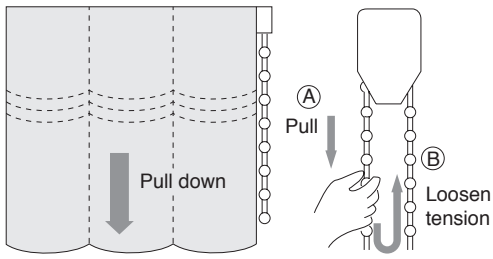

Creaty Drum Type Twin One Chain


How to pull up the shade

1. <Front Shade>
Pull down the front side of Ball Chain.
<Back Shade>
Pull down the back side of Ball Chain.
2. Loosen the tension on the Ball Chain when you want to stop at a certain point.

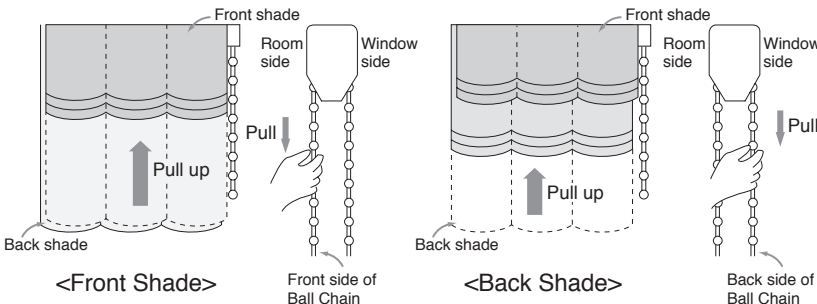

How to pull down the shade


1. <Front Shade>
Pull down the front side of Ball Chain.
<Back Shade>
Pull down the back side of Ball Chain.
2. Loosen the tension on the Ball Chain and release it.

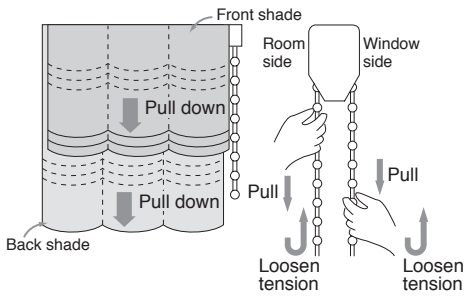

Creaty Cord


How to pull up the shade

Pull the Cords until the shade reaches the desired level.

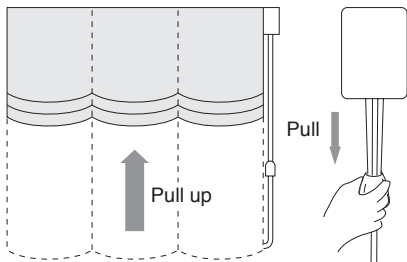

How to pull down the shade

Pull the Cords about 5 cm (2.0"), then loosen the tension on the Cords. The shade will then pull down.

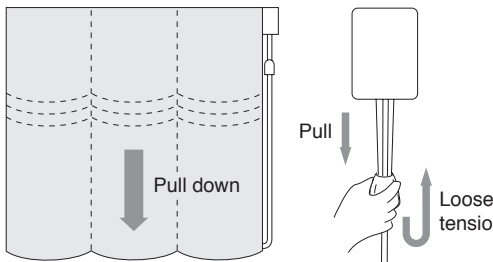

The Stopper locks and unlocks by turns every time you pull down the cord.

Creaty Parts

Product Name		Drum type			Cord type		Product Code
		Single	Twin One Chain	Twin	Single	Twin	
Head Rail (4 m)		○	—	—	○	○	04610001
Universal Bracket		○	—	—	○	○	04610002
Twin Universal Bracket		—	○	○	—	○	04620002
Ceiling Bracket		○	○	○	○	○	04610003
End Cap		○	—	—	○	○	04610004
Lift Cord (1.2 m) TO-0712		White	○	○	○	○	01320275
		Beige	○	○	○	○	01320276
		Brown	○	○	○	○	01320277
		Gray	○	○	○	○	01320278
Slide-in Velcro (50 m)		○	○	○	○	○	01320263
Return		○	○	○	○	○	04610011
Adjustable Return		○	○	○	○	○	04610012
Cord Stopper		—	—	—	○	○	04750002

Product Name		Drum type			Cord type		Product Code
		Single	Twin One Chain	Twin	Single	Twin	
Stopper Case		—	—	—	○	○	04750004
Stopper Guide		—	—	—	○	○	04750014
(^{*2}) Cord Guide		—	—	—	○	○	04750006
RS Cord Stop N		White	—	—	○	○	01320283
		Beige	—	—	○	○	01320285
		Brown	—	—	○	○	01320287
		Gray	—	—	○	○	01320289
RS Cord Stop Washer		—	—	—	○	○	01320291
(^{*1}) Creaty Cord Safety Joint (Large)		—	—	—	○	○	01320266
RS Cord 2.8 mm		White	—	—	○	○	01320231
		Beige	—	—	○	○	01320232
		Brown	—	—	○	○	01320234
		Gray	—	—	○	○	01320233
Corner Joint for Cord Type		Right	—	—	○	—	04750010
		Left	—	—	○	—	04750012
Cord Separator		—	—	—	—	○	04750008

Product Name		Drum type			Cord type		Product Code
		Single	Twin One Chain	Twin	Single	Twin	
Shaft (Steel)	3 m	○	○	○	—	—	04610018
	4 m	○	○	○	—	—	04610041
Coiling Drum		○	○	○	—	—	04610006
Speed Controller		○	○	○	—	—	04610007
Speed Controller (Heavy duty)		○	○	○	—	—	04620015
(^{*3}) Clutch		○	○	○	—	—	04610040
RS Ball Chain TO-0748	Clear White	○	—	○	—	—	04610013
	Clear Beige	○	—	○	—	—	04610014
	Clear Brown	○	—	○	—	—	04610015
	White	○	—	○	—	—	04610016
RS Loop Ball Chain TO-0748 (White)	L= 1000 mm	—	○	—	—	—	04610045
	L= 1500 mm	—	○	—	—	—	04610046
	L= 2000 mm	—	○	—	—	—	04610047
	L= 2500 mm	—	○	—	—	—	04610048
Ball Chain Joint		White	○	—	○	—	04610017
		Beige	○	—	○	—	04610036
		Brown	○	—	○	—	04610037

Product Name		Drum type			Cord type		Product Code
		Single	Twin One Chain	Twin	Single	Twin	
Pulley		○	—	—	—	—	04610005
Corner Joint for Drum Type	Right	○	—	—	—	—	04610008
	Left	○	—	—	—	—	04610009
Drum Twin Head Rail (4 m)		—	○	○	—	—	04620001
Drum Twin End Cap		—	○	○	—	—	04620016
RS Keeper Plate		—	○	○	—	—	01320294
Drum Twin Pulley	Right	—	—	○	—	—	04620005
	Left	—	—	○	—	—	04620006
Drum Twin One Chain Pulley	Right	—	○	—	—	—	04610042
	Left	—	○	—	—	—	04610043
RS Weight Bar 25	3000 mm	○	○	○	○	○	01320267
	4000 mm	○	○	○	○	○	01710022

^{*1} Using for one swag.
^{*2} Using for product width at 180 mm (7.1") to 290 mm (11.4").
^{*3} Using for product width 1,410 mm (56") over.